


Model 3150B
**Dual-Stacked Log Periodic
Dipole Array Antenna**
Assembly Manual

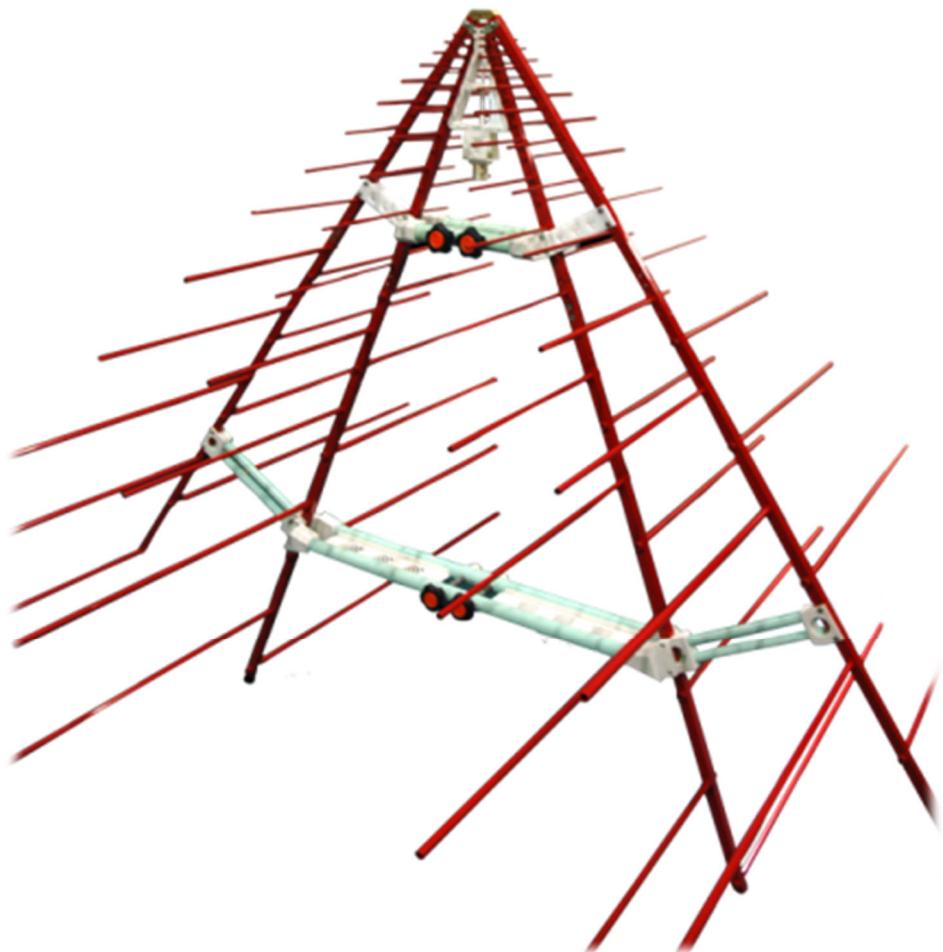

 **ETS-LINDGREN[®]**
An ESCO Technologies Company

ETS-Lindgren, Inc. reserves the right to make changes to any products herein to improve functioning or design. Although the information in this document has been carefully reviewed and is believed to be reliable, ETS-Lindgren does not assume any liability arising out of the application or use of any product or circuit described herein; nor does it convey any license under its patent rights nor the rights of others. All trademarks are the property of their respective owners.

© Copyright 2012-2024 by ETS-Lindgren, Inc. All Rights Reserved. No part of this document may be copied by any means without written permission from ETS-Lindgren, Inc.

Trademarks used in this document: The *ETS-Lindgren* logo is a trademark of ETS-Lindgren, Inc.

Revision Record | MANUAL,3150B | Part #399335, Rev. B

| Revision | Description | Date |
|-----------------|--------------------|-----------------|
| A | Initial Release | October, 2012 |
| B | Removed 7-TR | September, 2024 |

Table of Contents

| | |
|---|-----------|
| Notes, Cautions, and Warnings | iv |
| 1.0 Introduction | 5 |
| Standard Configuration..... | 6 |
| ETS-Lindgren Product Information Bulletin | 7 |
| 2.0 Maintenance | 8 |
| Replacement and Optional Parts..... | 8 |
| Service Procedures | 8 |
| Specifications..... | 9 |
| Electrical Specifications | 9 |
| Physical Specifications | 9 |
| 3.0 Assembly Instructions | 10 |
| Components to Assemble | 10 |
| Attach the Removable Elements | 11 |
| Overview of Steps | 12 |
| Attach Two Boom Assemblies to Center Support Bar | 13 |
| Attach Feed Boom Assembly | 15 |
| Attach Remaining Two Boom Assemblies to Side Support Bars | 16 |
| 4.0 Disassembly Instructions..... | 19 |

Notes, Cautions, and Warnings


| | |
|---|---|
|  | <p>Note: Denotes helpful information intended to provide tips for better use of the product.</p> |
|  | <p>Caution: Denotes a hazard. Failure to follow instructions could result in minor personal injury and/or property damage. Included text gives proper procedures.</p> |
|  | <p>Warning: Denotes a hazard. Failure to follow instructions could result in SEVERE personal injury and/or property damage. Included text gives proper procedures.</p> |



See the ETS-Lindgren *Product Information Bulletin* for safety, regulatory, and other product marking information.

1.0 Introduction

The **ETS-Lindgren Model 3150B Dual-Stacked Log Periodic Dipole Array (LPDA) Antenna** is comprised of two separate 100 ohm LPDAs. The result is a 50 ohm input impedance array when assembled in parallel, providing increased gain when compared to a single LPDA. Also, the VSWR is low so that it provides excellent match with the amplifier, resulting in the generation of a high field per input power.

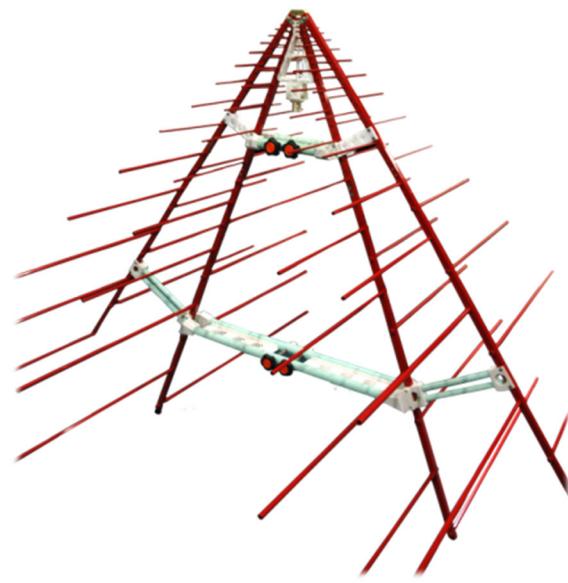

The Model 3150B is ideal in situations where high fields need to be generated. Although the Model 3150B can be used as a receive antenna, the primary application is for generating the high fields that are required in automotive EMC applications per standards like ISO 11541-2, or for MIL-STD susceptibility testing.

The frequency range covers 80 MHz to 1 GHz. The Model 3150B can generate 200 V/m with less than 1 kW of input power at a 1-m distance for the 100 MHz to 1 GHz range. When combined with ETS-Lindgren Model 3159 or Model 3158 High-Power Biconical Antennas, the 3150B becomes an integral part of the ETS-Lindgren high severity level immunity solution.

The Model 3150B is fitted with a 7/16 coaxial connector. With this connector the antenna can handle up to 5 kW of input power at 80 MHz and up to 3 kW at 1 GHz. Contact your ETS-Lindgren Sales Representative for information about mounting options.

Standard Configuration

The Model 3150B ships unassembled, and includes the following components to be assembled, plus the necessary fasteners. For assembly steps, see page 10.

- Feed Boom Assembly



- Boom Assemblies (4)

The five longest elements (the last five elements from the bottom of each boom assembly) are removed for shipping. To attach the removable elements to the boom assembly, see page 11.



(one boom assembly shown with the five removable elements attached)

- Center Support Bar



- Side Support Bars (2)



ETS-Lindgren Product Information Bulletin

See the ETS-Lindgren *Product Information Bulletin* included with your shipment for the following:

- Warranty information
- Safety, regulatory, and other product marking information
- Steps to receive your shipment
- Steps to return a component for service
- ETS Lindgren calibration service
- ETS Lindgren contact information

2.0 Maintenance

CAUTION

Before performing any maintenance, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.



Maintenance of the Model 3150B is limited to external components such as cables or connectors. If you have any questions concerning maintenance, contact ETS-Lindgren Customer Service.

If you have any questions concerning maintenance, contact ETS Lindgren Customer Service.

Replacement and Optional Parts



ETS-Lindgren may substitute a similar part or new part number with the same functionality for another part/part number. Contact ETS-Lindgren for questions about part numbers and ordering parts.

There are no replacement or optional parts for this assembly.

Contact your ETS-Lindgren Sales Representative for information about mounting options.

Service Procedures

For the steps to return a system or system component to ETS-Lindgren for service, see the *Product Information Bulletin* included with your shipment.

Specifications

Electrical Specifications

| | |
|----------------------------------|---------------------------------|
| Frequency Range: | 80 MHz to 1 GHz |
| VSWR (Average): | 2:1 |
| Maximum Continuous Power: | 5 kW at 80 MHz, 2.5 kW at 1 GHz |
| Peak Power: | 7 kW at 80 MHz, 4 kW at 1 GHz |
| Impedance (Nominal): | 50 Ω |
| Connector: | 7/16 female |

Physical Specifications

| | |
|----------------|----------------------|
| Height: | 203.07 cm (79.95 in) |
| Width: | 209.07 cm (82.31 in) |
| Depth: | 150.44 cm (59.23 in) |
| Weight: | 10.56 kg (23.28 lb) |

3.0 Assembly Instructions

CAUTION

Before assembling or connecting any components, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.

CAUTION

Take care when assembling the Model 3150B. Make sure the antenna is on a stable surface at all times.

CAUTION

Assembly steps require assistance from one or more crewmembers.

Components to Assemble



The four boom assemblies are identical and interchangeable. (Contact your ETS-Lindgren Sales Representative for information about mounting options.)



You will require a Phillips screwdriver (not included) to assemble the Model 3150B.




Feed boom assembly



Center support bar




Side support bars (2)

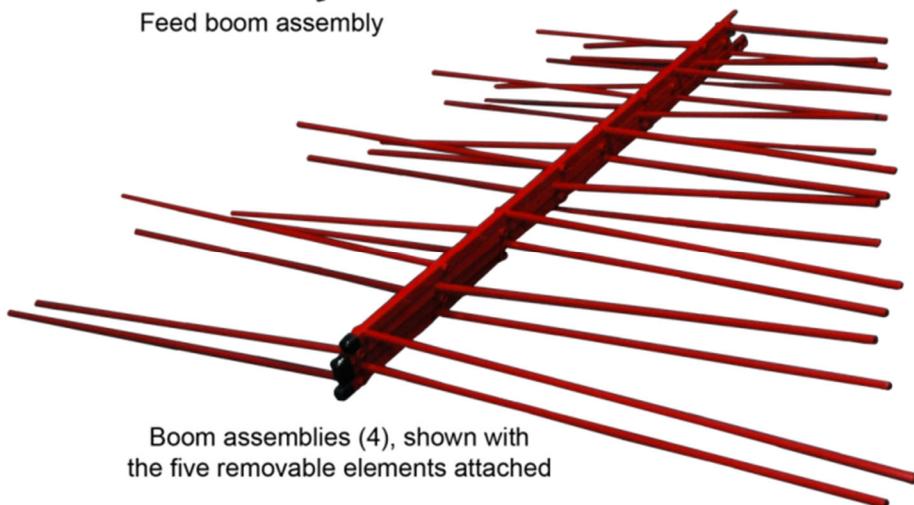

Boom assemblies (4), shown with the five removable elements attached

Attach the Removable Elements

The five longest elements on each boom assembly (the last five from the bottom) are removed for shipping, and should be re-attached during assembly inside the chamber.

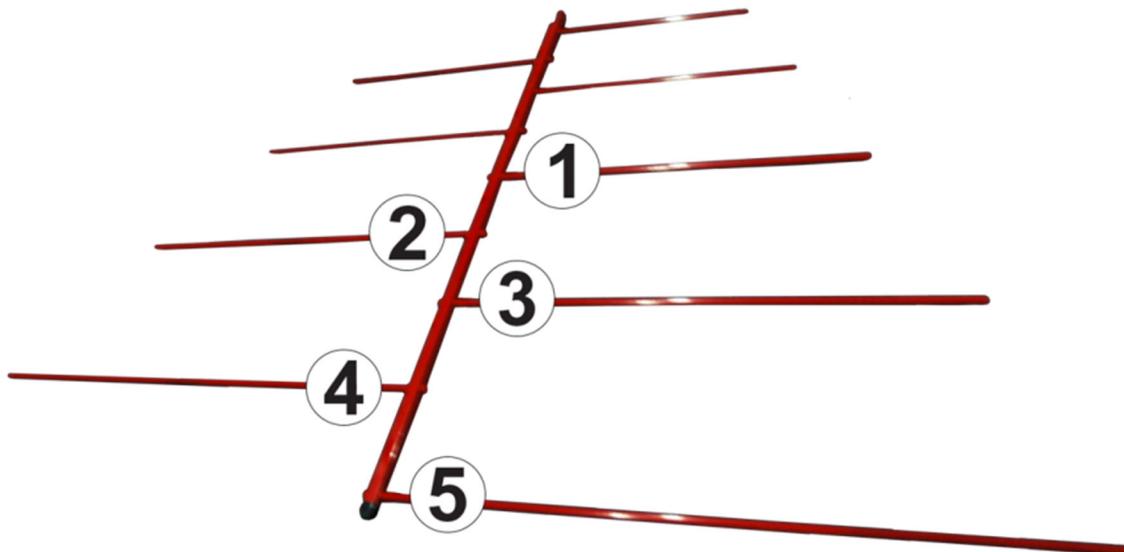

The elements and the location on the boom assembly where they attach are marked with the numbers **1**, **2**, **3**, **4**, and **5**.

CAUTION


Do not cross thread the connection or permanent damage to the element or boom could occur.

1. Match the number **1** on the element with the number **1** on the boom.
The end of the element and the connector on the boom are threaded; rotate the element into the connector, and then hand tighten.
2. Repeat step 1 for elements marked **2**, **3**, **4**, and **5**, attaching them to the corresponding locations on the boom marked **2**, **3**, **4**, and **5**.
3. Repeat step 1 and step 2 for each boom assembly.

Overview of Steps



Before you begin, see page 11 to attach the removable elements to each boom assembly.

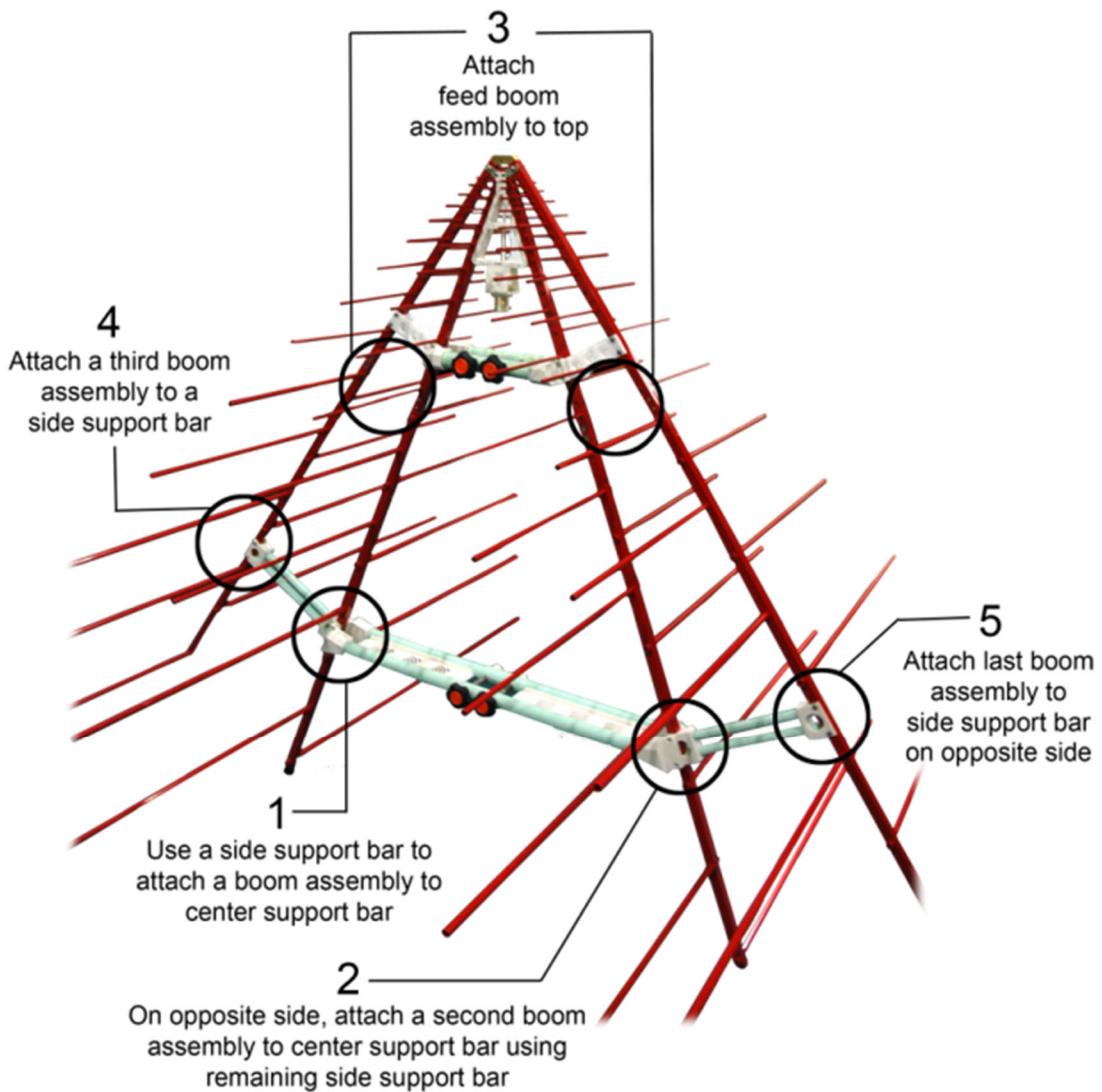


Attach Two Boom Assemblies to Center Support Bar




Before you begin, see page 11 to attach the removable elements to each boom assembly.


1. Align holes in side support bar with holes in lower portion of boom assembly.

Fit side support bar and center support bar together with boom assembly in the middle.

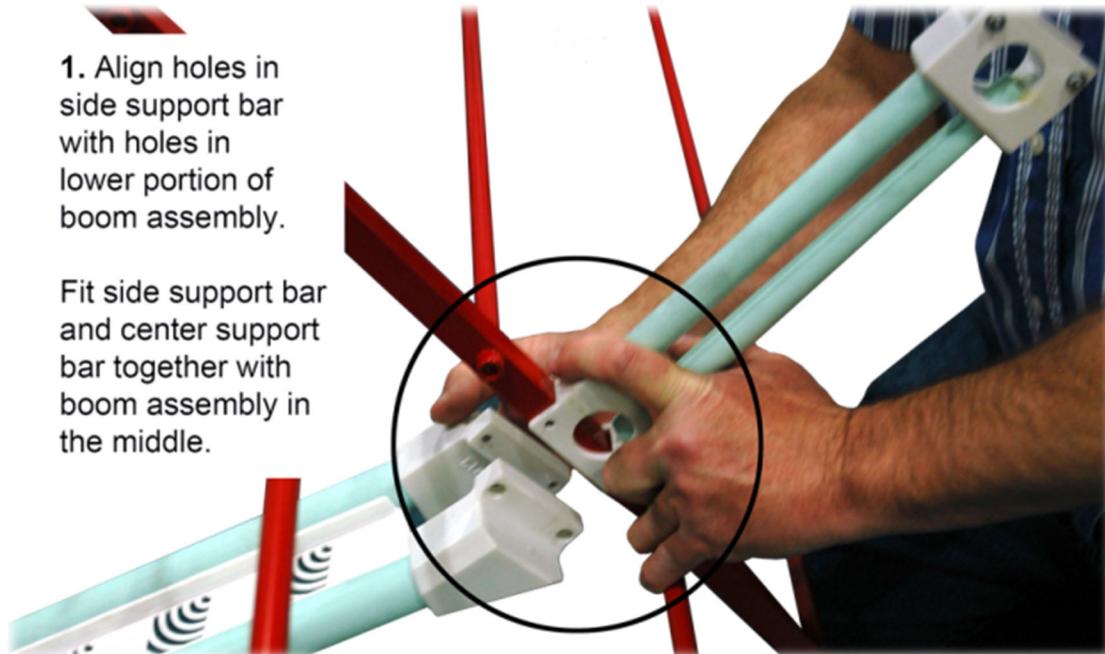


2. Insert two screws; tighten.

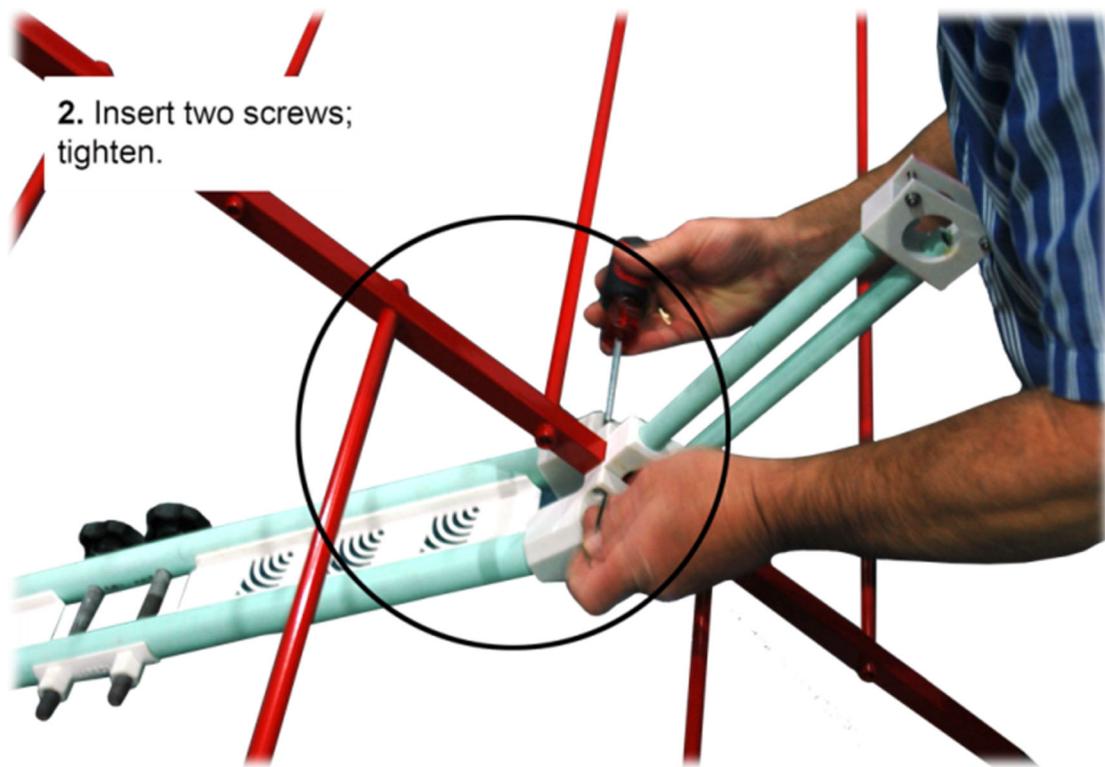

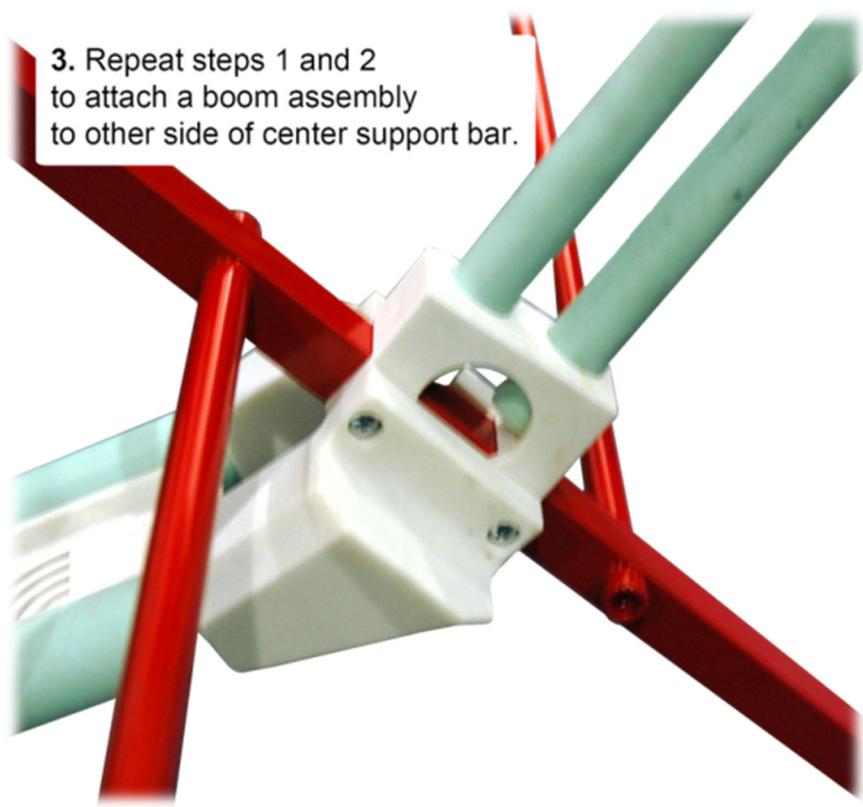


3. Repeat steps 1 and 2 to attach a boom assembly to other side of center support bar.

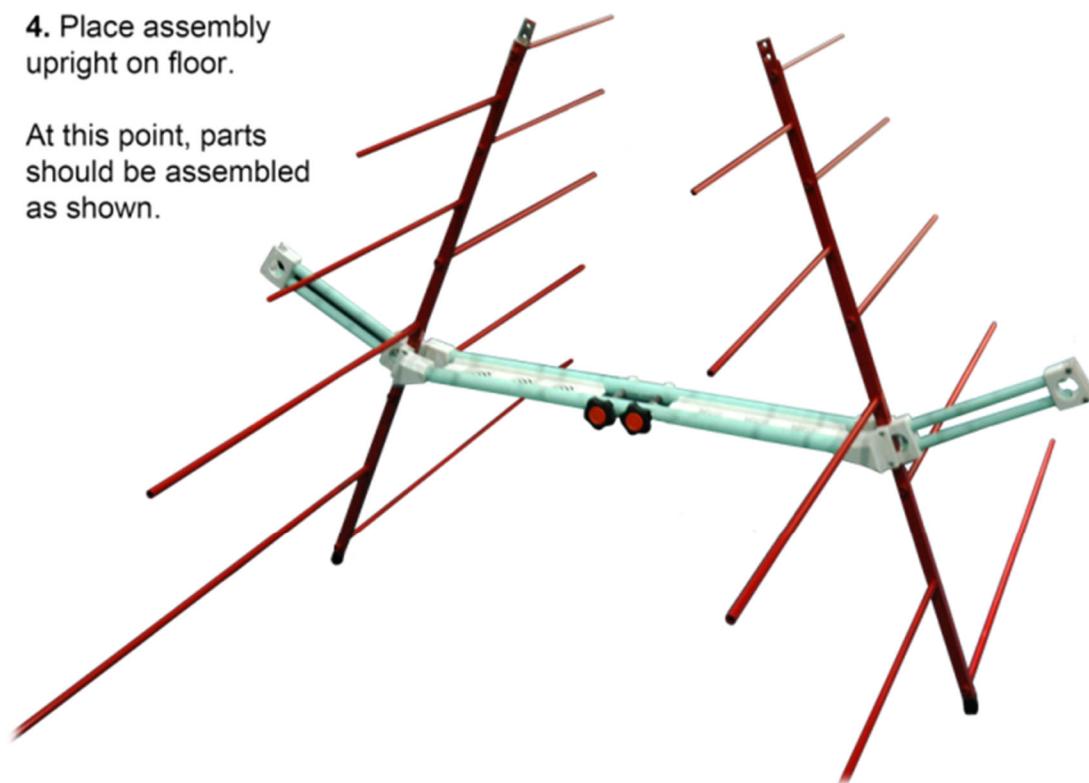


4. Place assembly upright on floor.

At this point, parts should be assembled as shown.

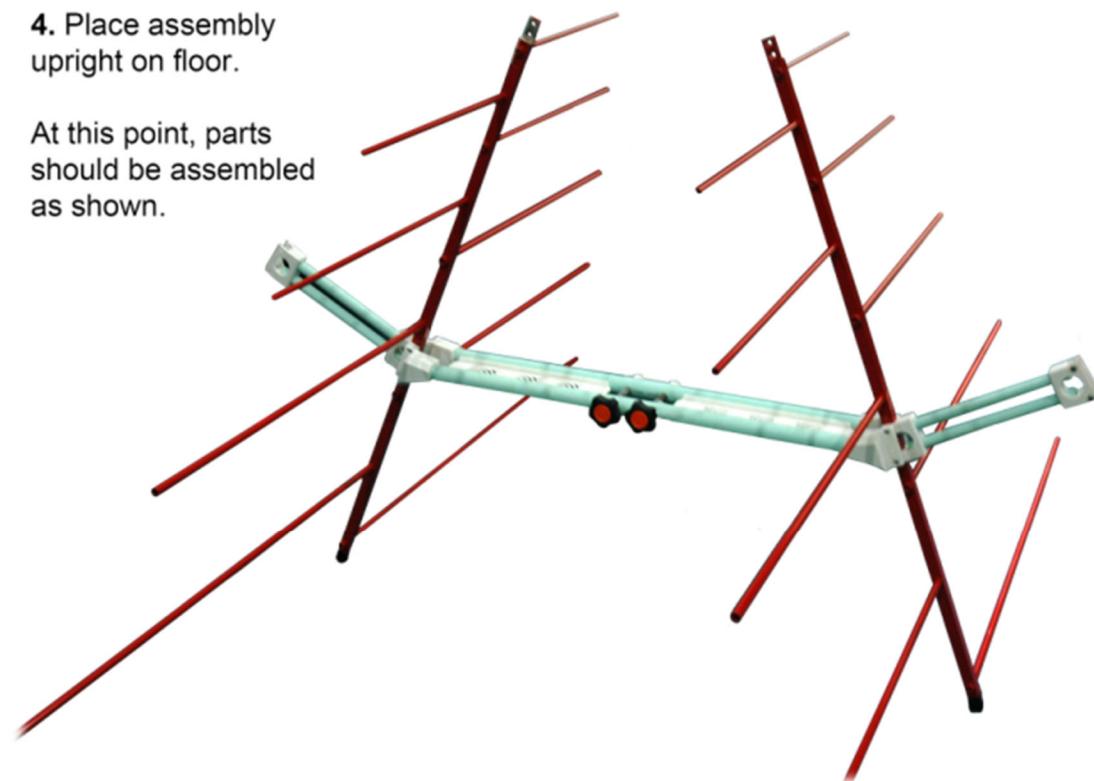

Attach Feed Boom Assembly

5. Mate connection points on bottom of feed boom assembly with connection points on top of assembled unit.

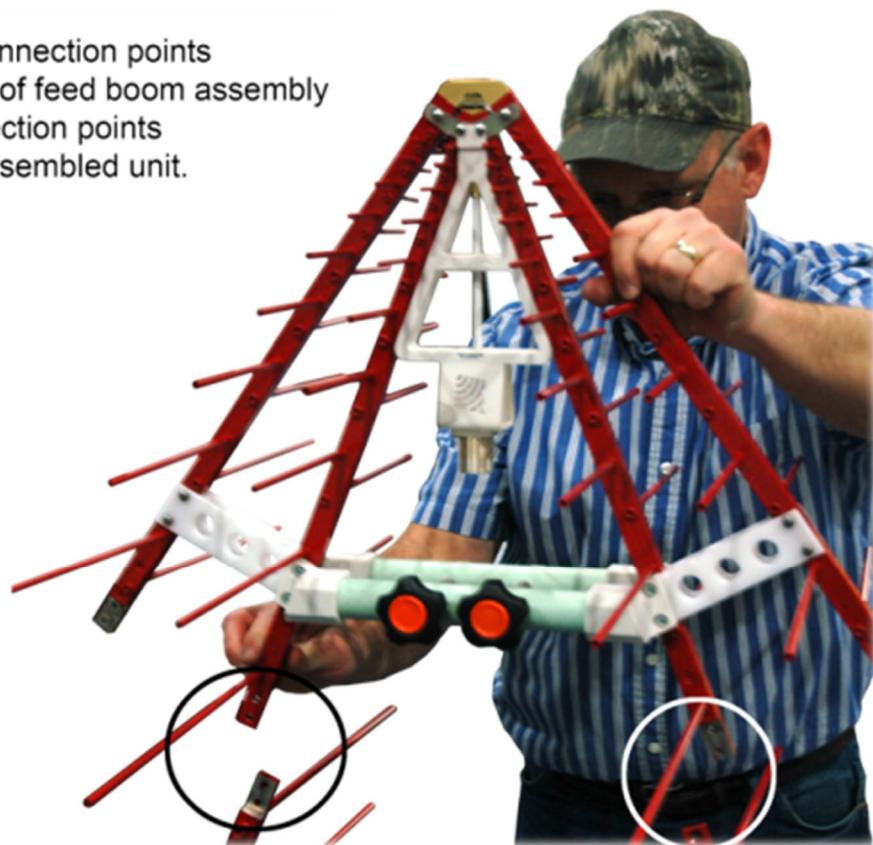


6. Insert two screws at each connection point; tighten.




Attach Remaining Two Boom Assemblies to Side Support Bars

7. Align holes in side support bar with holes in lower portion of boom assembly.


Mate connection point on top of boom assembly with connection point on bottom of feed boom assembly.

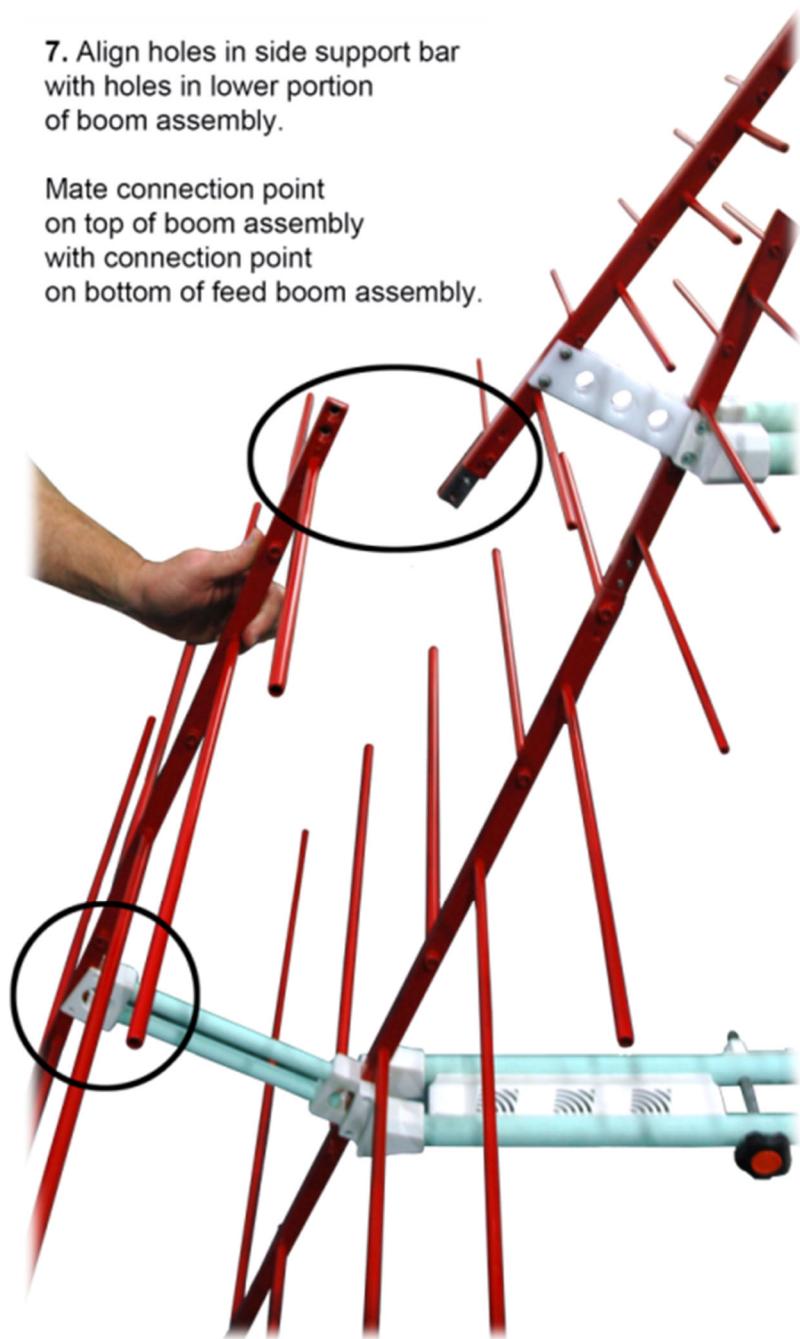

8. Insert two screws at connection point between boom assembly and feed boom assembly; tighten.

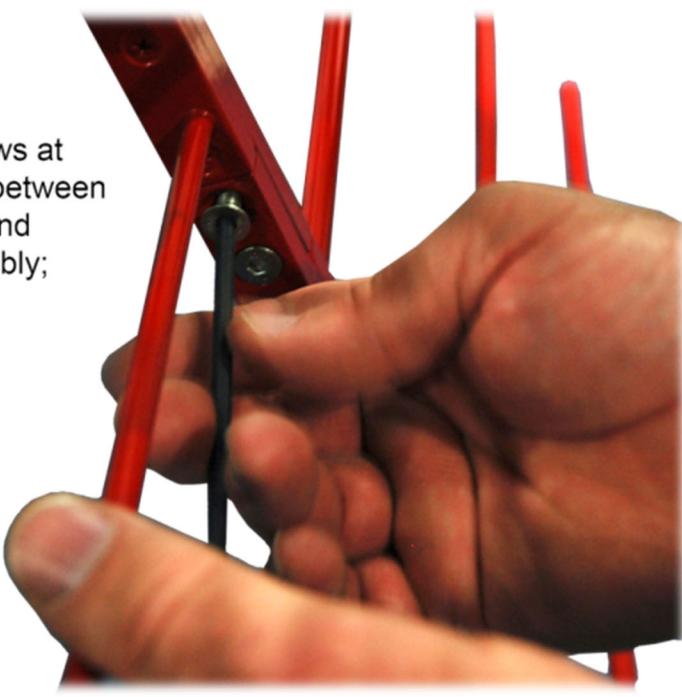


9. Insert two screws into side support bar; tighten.

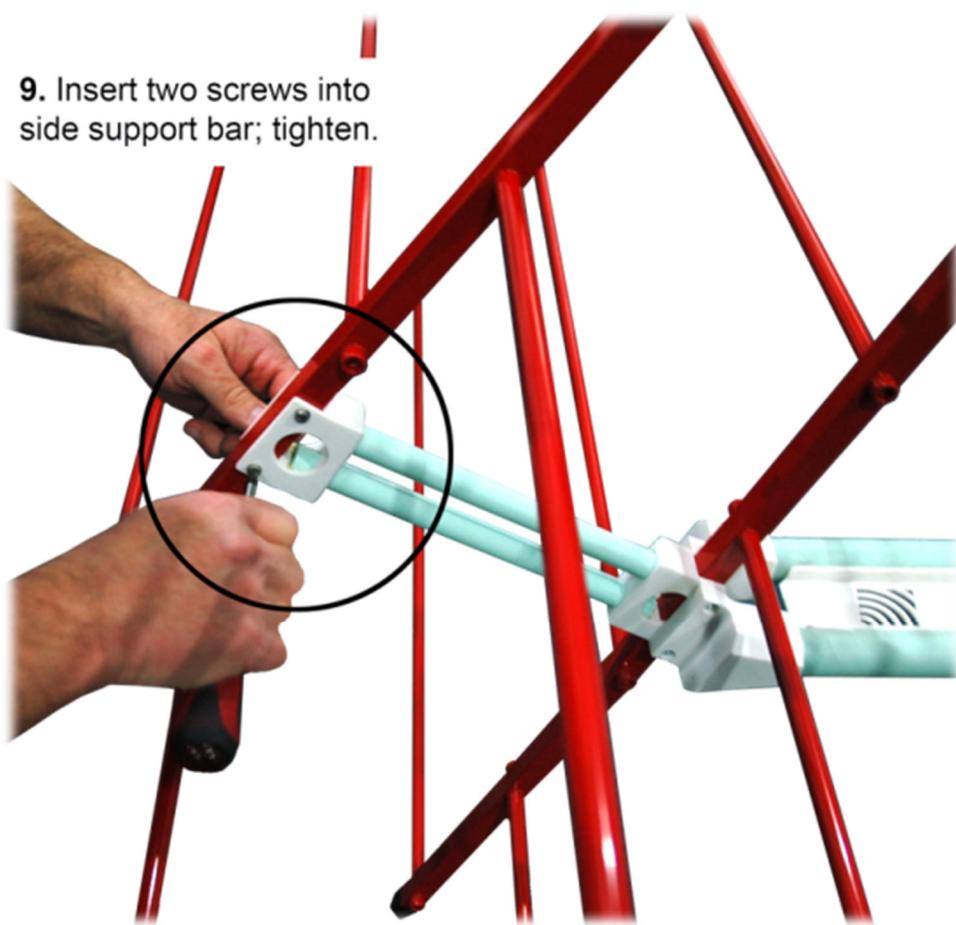

10. Repeat steps 7, 8, and 9 to attach remaining boom assembly.

When complete, the Model 3150B should be assembled as shown.

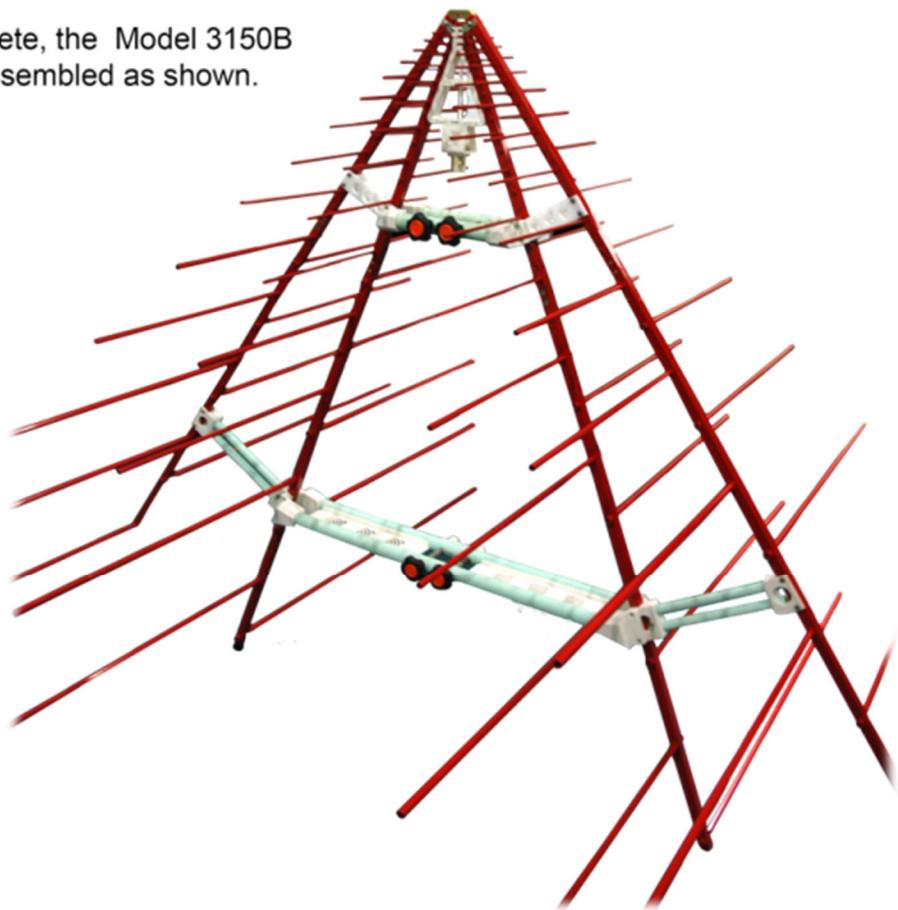

4.0 Disassembly Instructions

CAUTION

Before disconnecting any components, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.

CAUTION

Place the Model 3150B on a stable surface before disassembling. As you remove parts, place them in a safe location. Store disassembled components in secure, protective location. Retain all fasteners.



See the corresponding step in *Assembly Instructions* on page 10 for detailed information about how each component is attached.

